



BMW R1200/1250GS & ADV LC

Rear brake reservoir protector

Installation manual




You will need a T30 Torx driver.



Step 1: Remove the bolt holding the rear brake reservoir to the frame.



Step 2: Hold the protector in place over the rear brake reservoir.

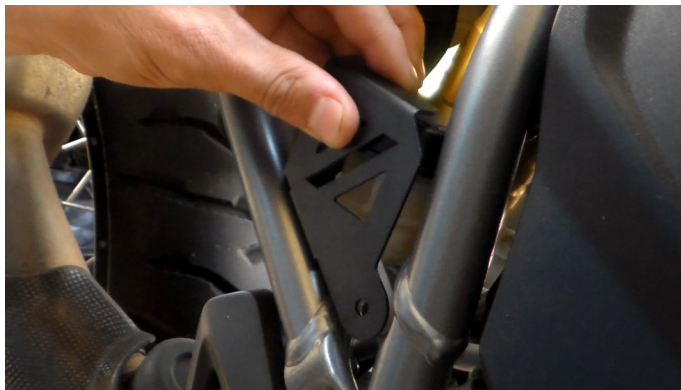

Step 3: Re-tighten the bolt into place.

